



# 韓國三星電子鎖使用說明書

九江五金行 臺北市萬華區西寧南路 233 號 Tel : 02-2331-5987

[www.九江五金.tw](http://www.九江五金.tw)

New Concept in Door Locks

## PUSH PULL



-  Easy Way to Open Door
-  Secured Lock-up
-  Smart Functions
-  Innovative Technology



Model : SHS-P717

# SHS-P717

## USER MANUAL

### Samsung SDS Digital Door Lock

#### Convenient Opening

Easy push/pull handle access

#### Welcome Function

When a user gets close to the door lock, the authorization standby mode will automatically activate.

#### Silent-Mode Function

When going in or out, the sound of the key entering and door opening will be suspended.

#### Automatic Card Reading Function

When a card touches the reader, the reader will conveniently recognize the card.

#### Double Authorization

Requires card & password combination to open

#### Security Assurance Function

When someone is inside the house, authorization for entry from the outside will be prohibited.

 
#### Built-in Fire Detection

Generates alarm in case of a fire

#### Security Function

Prevents intrusion from the outside

www.samsungsds-nss.com/en



GC68-02023A ED:05


## Safety Cautions

**Warning** This section contains important information to ensure the user's safety and prevent potential damage to property. Please, read this section carefully and use the product accordingly.


- The user shall not install or repair the product without authorization.
- Do not install the product in the place where the gap between the door and the frame is 5mm or more.
- Make sure that no unauthorized person has the access to the password.
- Do not operate the product with wet hands, and keep liquids such as water or drinks away from the product, or the product may malfunction or be damaged.
- Do not use the excessive force or sharp objects to push the lockbuttons, as this can damage the product.
- Make sure that the door is completely closed when going outside. The manufacturer does not assume the responsibility for any harm caused by engagement of the lock on an improperly closed door.
- Please do not hang on the product or pull it.
- Be sure to correctly match the poles (+/-) when installing the batteries. Install the batteries with the correct poles (+/-).
- Replace all batteries immediately after they run out of power, and never mix new batteries with used ones.
- Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction.
- Replace the batteries within 1 week after the battery replacement alarm sounds.
- Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction.
- Replace the batteries within 1 week after the battery replacement alarm sounds.
- Make sure that the door is completely closed when going outside. The manufacturer does not assume the responsibility for any harm caused by engagement of the lock on an improperly closed door.

## Product Components


The product components used may vary depending on the installation environment.

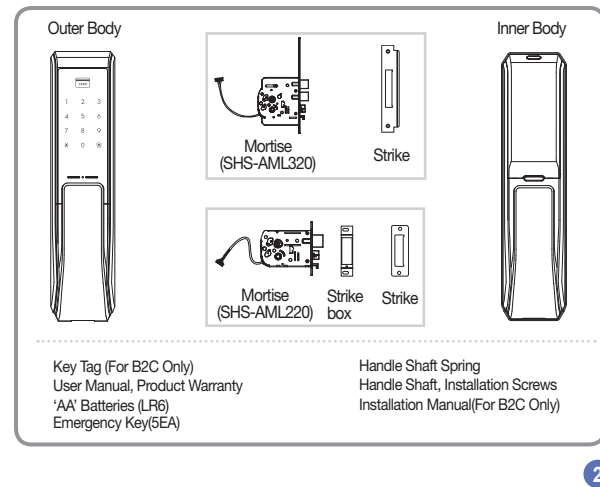

## Outer Body Parts

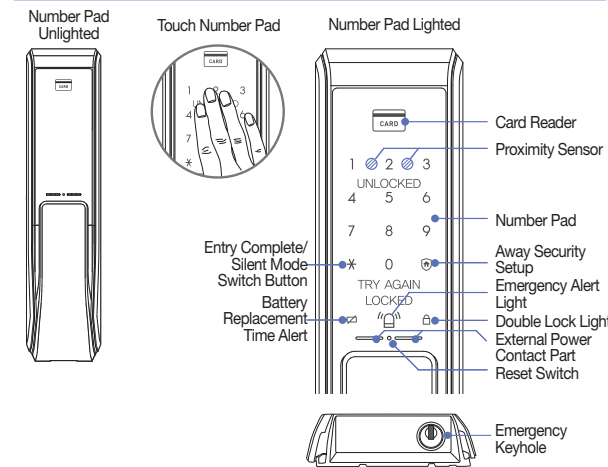


## Inner Body Parts

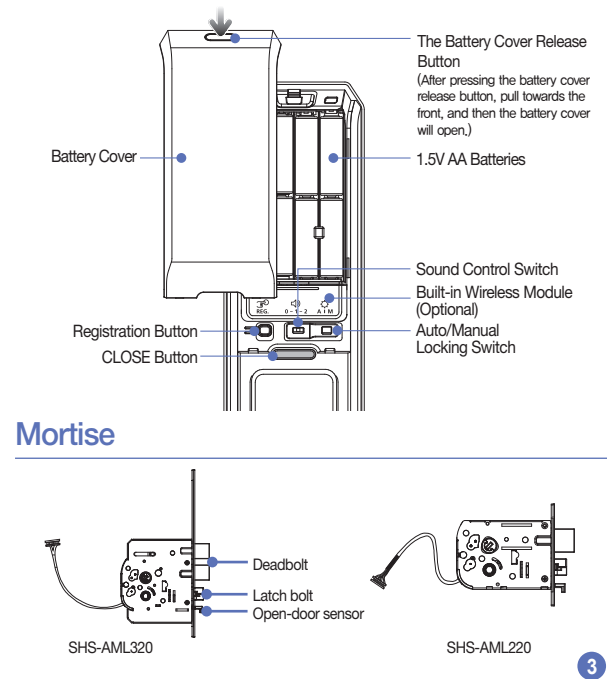

## Card and Key Tag Registration

Up to 30 cards, including the key tag and user password, can be registered. (Only ISO14443 A Type is available.)

- Pressing the [Register] Button (from the inside)
- Entering the Password (from the outside)
- Placing the Card or Key Tag on the Card Reader (from the outside)
- Confirming Card or Key Tag Registration (from the outside)

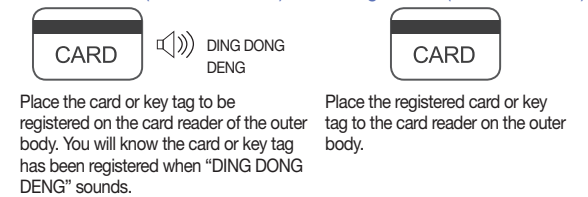


**Warning** To register multiple cards or key tags, lightly place another card or key tag to the card reader within 20 seconds after registering the previous card or key tag. ID number is given automatically in order of the registration.

- Enter 2 digits ID number
- Enter new user password
- Placing the Card or Key Tag on the Card Reader (from the outside)
- Confirming Card or Key Tag Registration (from the outside)

**Warning** User password is only for the user, so other functions such as registering cards are not available with this password. One ID has only one password or card.



## Deleting Registered Cards

- Pressing the [Register] Button (from the inside)
- Entering the Current Password (from the outside)
- Pressing the [Registration] button for 3 seconds.
- Pressing the [Registration] button for 3 seconds.

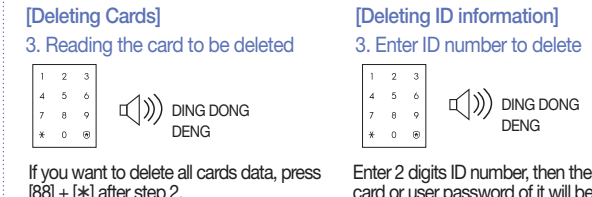


## Double Authorization Mode Setting

Double authorization mode requires both card and password to open the door, ensuring more security. To setup the double authorization mode, more than 1 card must be registered.

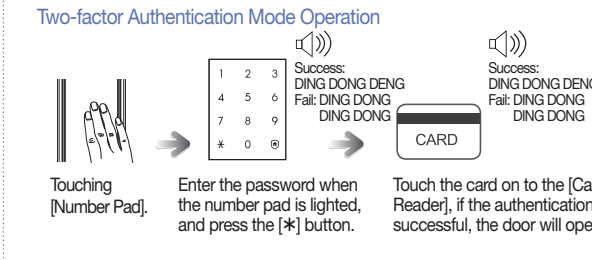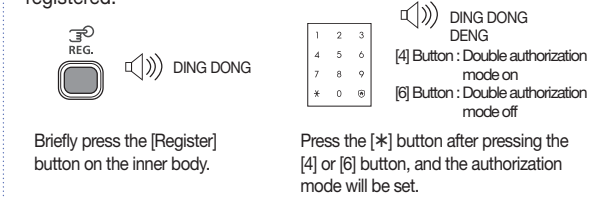


## Multi-level Security Code Entry Mode Setting

You can set the security mode suitable for your use when you open the door using a password.

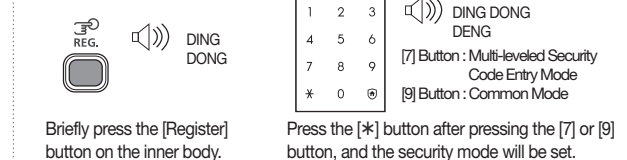


## Setting the Security Function

This is a function to prevent any intrusion while you are out. Should the door be opened from the inside while the intrusion prevention function is on, the emergency alert light will flash and the alarm will make "beep beep beep-" sound.

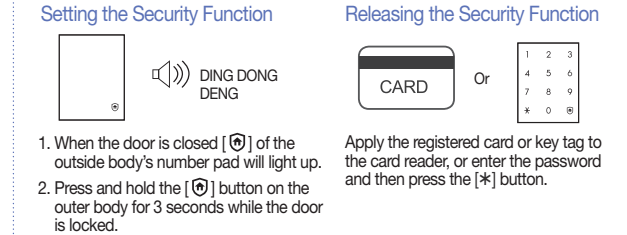


## Security Assurance Mode Activation/Deactivation

At-home security mode is to prevent opening of the door from outside while someone is inside.

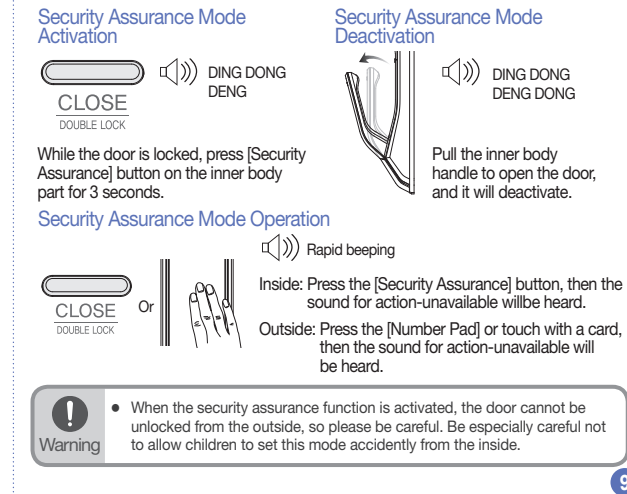

## Menu Table

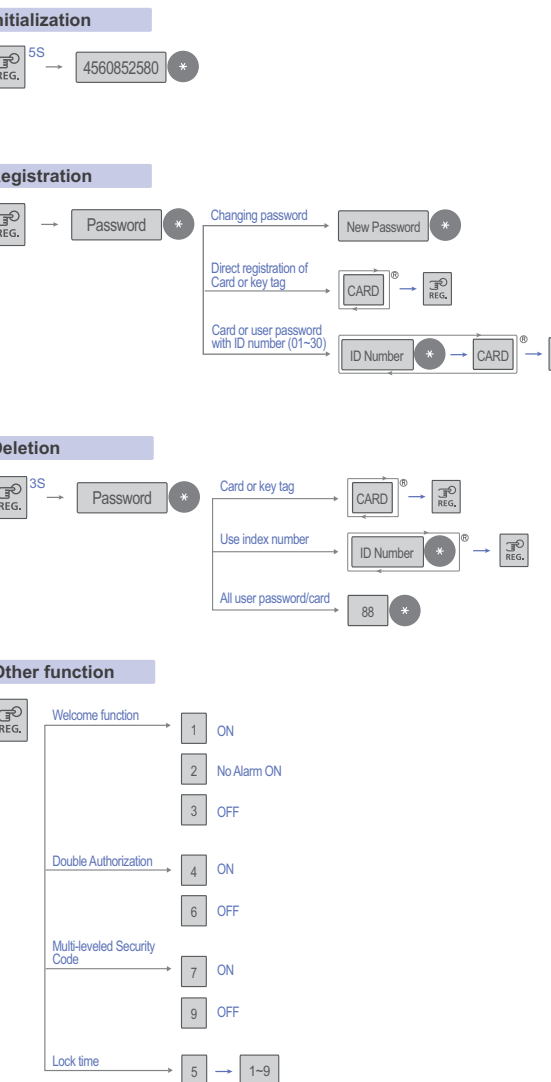

## Opening the Door from Outside with a Password


When purchased, the product is set to Multi-level Security Code Entry Mode initially. Please refer to "Multi-level Security Code Entry Mode setting" for Common Mode setting.

- Silent Mode**: Before entering the password, press the [\*] button and enter the password, then both the sound of the key entering and the door opening will be suspended. It is a useful function if you do not want to disturb neighbors when you go in and out at night.
- Touching [Number Pad] will light up the number pad.
- When two arbitrary buttons are lighted, press the buttons in order.
- When the numbers on the number pad are lighted, enter the password and press the [\*] button.

**Note** Password must be entered after the light is on, and if does not, touch [Number Pad] and re-enter. To cancel, press [0] button and re-enter. If the password is wrong 5 times, "peep" warning alarm will sound 20 times and the system will shut-down for about 3 minutes. When malfunction happens, "beep" will sound every 10 seconds, and stop mode will be turned off automatically after 3 minutes with multiple "beeps".

## Opening the Door from Outside with a Card or Key Tag


The door can be opened from outside using a card or key tag. Place the registered card or key tag on the card reader.

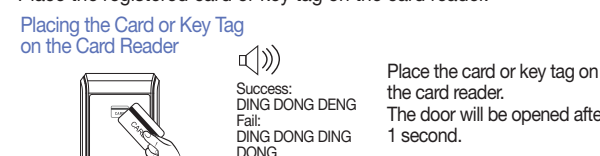

## Opening the Door from the Inside



## Closing the Door from the Inside

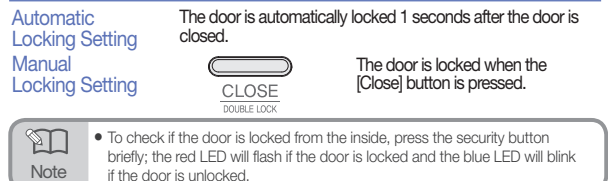

## Initialization (Password, Card, Key Tag)

All registered data (password, card, key tag) are deleted. After initialization, the password is set to '1234', and the registered card, key tag data are erased. Please register a new password after initialization.

- Pressing the [Register] Button (from the inside)
- Entering the Numbers for Initialization (from the outside)
- Pressing the [Register] button for 5 seconds.
- When the number pad is lighted, enter '4560852580' and then press the [\*] button.


## Password Change

The password can be 4-12 digits number. Only one password can be registered.

- Pressing the [Register] Button (from the inside)
- Entering the Current Password (from the outside)
- Entering a New Password (from the outside)
- Checking New Password Operation (from the outside)


## Sound Setting and Releasing

The sound that is generated when the number buttons are pressed, when the door is locked or when the locked door is unlocked, can be set according to the user's preference. The product is set to generate all sounds at the factory.

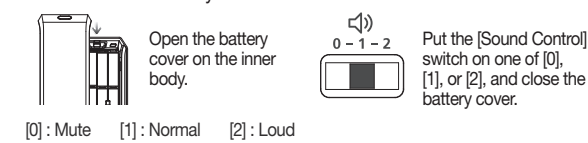


## Door Lock Time Setup Function

This function sets the time interval between the moment the door open/closed sensor recognizes the door as closed and the moment deadbolt locks the door. It can be prevented the deadbolt jam problem by adjusting the time.

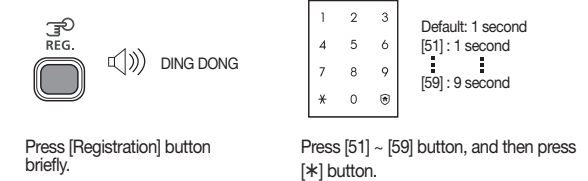

## Welcome Function On/Off


The welcome function is a convenient function that automatically activates the authorization standby mode when a user approaches the door, even before touching the number pad.

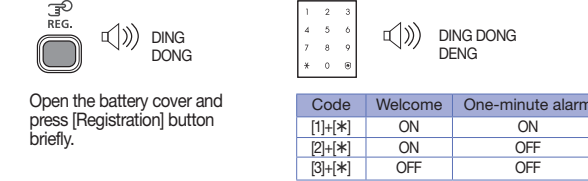

- On and Off / Function Description**:
  - Welcome function: The mode will automatically activate the authorization standby mode when a user approaches the door lock.
  - One-minute alarm: When someone remains in front of the door lock for more than a minute, this mode will sound the tamper prevention alarm.


## Automatic/Manual Locking Setting

The Automatic Locking mode allows for automatic locking of the door when it is closed.

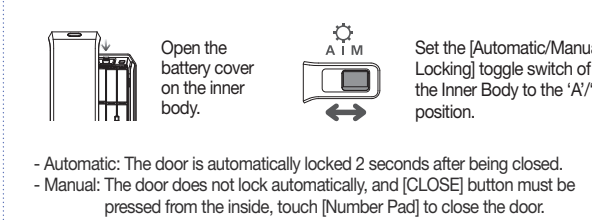

## Using the Emergency Battery

If the batteries are not replaced after their replacement time comes, they will be completely discharged and the lock will not operate.

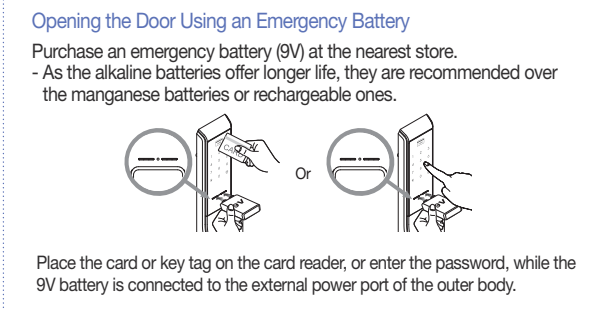

## Replacing the Batteries

**Battery Replacement Alarm Generation**: If the melody of "Blues for Elise" sounds when opening the door with the password or a card (key tag), it is time to replace the batteries. (The low battery indicator is lighted when the melody sounds.)

- Replacing the Battery**: Replace all 8 batteries within a 1 week of the first alarm sound. The unit will stop operating suddenly if the batteries are not replaced.
- Warning**: Depending on battery manufacturer, date of manufacture and the user environment, the duration of use may vary. (In the case of average use, given as 10 times a day, 8 AA alkaline 1.5V batteries can last for 12 months.) If the poles of the batteries are not placed properly, the lock will not operate normally. Liquid leaks from batteries can damage the product. Check the batteries regularly (every 6 months). After the battery replacement alarm has sounded, password/card information cannot be registered, changed, deleted, initialized or configured until the batteries are replaced.

## Intrusion Detection Function

This function generates the alarm sound when an attempt is made to forcefully open the door from the inside or the outside. (This is a basic function of the lock, and cannot be separately set or released.)

If the door is forcefully opened while locked, the door opening sensor detects it and generates the alarm sound.

## Alarm Sound (Prank Prevention Function)

This function generates an alarm sound and deactivates lock operation when it is improperly handled from the outside. This alarm will sound if an attempt is made to open the door with an invalid card, or if a wrong password is entered five times in a row. The alarm sound is generated, and the lock is deactivated for 3 minutes. While the door is in this inactive mode, a single "DING" sound is generated every 10 seconds and seven consecutive "DINGS" will sound after 3 minutes. Following this, the lock is released from inactive mode.)

- Releasing the Alarm**:
  - Inside: Press the [Register] button.
  - Outside: Apply the registered card or key tag to the card reader, or enter the password and then press the [\*] button.

## Built-in Fire Detection Function

This function generates the alarm sound when fire is detected so that the residence can quickly respond. The built-in fire detection function is a basic function of the lock, and cannot be released by the user. Fire detection function is operational at about 75 °C ± 10 °C; this can vary depending on the installation environment.

When fire occurs, the temperature sensor detects it and flashes the [Close] button while generating the alarm sound. The door is automatically opened after the alarm sound has stopped. (The lock resumes normal operation if the inside temperature returns to a normal level.) The built-in fire detection function is activated when the temperature rises around 60°C, which may differ depending on the installation environment.

## Product Specifications

Item	Specifications
Voltage	AA Alkaline 1.5 Batteries (LR6) 4EA or 8EA (6V)
Emergency Power Source	9V Battery (6LF22) (Separately sold)
Operation Method	Electronic Control Method (Password entry or card or key tag reading)
Weight	3.9 kg (including both inner and outer bodies)
Product Dimensions	Outer Body (including the handle)
	Inner Body (including the handle)

The contents of this user guide are subject to change without prior notice to the user in order to enhance performance of the product.

# SHS-P717

## USER MANUAL

### Samsung SDS Digital Door Lock

- 便利的开门方式
- 便捷的Push Pull开门方式
- 迎宾功能
- 用户接近门锁时自动转为工作状态
- 礼仪功能
- 输入时可转为静音状态
- 房卡自动识别功能
- 房卡接触实现自动识别, 简单方便
- 双重认证功能
- 卡和密码的双重认证功能
- 室内安心功能
- 用户居家时, 将切断外部识别功能
- 火灾感应功能
- 内装火灾感应器
- 防盗功能
- 外出时启动防盗功能

配件名称	有毒有害物质或元素					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
金属配件	0	0	0	X	0	0
印刷电路组件 (Printed Board Assembly)	X	0	0	0	0	0
电缆 (Cable)	0	0	0	0	0	0
塑料配件 (Plastic)	0	0	0	0	0	0
电池	0	0	0	0	0	0

0: 配件中有害物质含量不超过<含量限制标准GB/T 26572>所规定的标准值  
 X: 配件中有害物质含量超过<含量限制标准GB/T 26572>所规定的标准值  
 上述表明本产品所含的有害物质含量信息, 配件别有害物质信息是根据合作公司所提供的信息和内部鉴定结果来制成的。部分配件所含的有害物质, 按照现在的技术水准是很难代替, 为了代替这个问题三星SDS (三星数据系统) 会竭尽全力去努力的。

www.samsungsds-nss.com/en

GC68-02023A ED.05

### 安全注意事项

**Warning** 为保证用户安全, 避免给用户带来财产损失及使用不便, 请务必仔细阅读以下内容后正确使用本产品。

- 禁止用户任意安装或修理本产品。
- 禁止用力下坠或用力拉本产品。
- 安装时, 门与门框之间的间距不能超过5mm。
- 请按照电池正负极 (+/-), 正确安装电池。
- 请小心管理密码, 并定期更换密码, 以免他人知道。
- 电池寿命已尽时, 请同时更换所有的电池, 禁止新旧电池混合使用。
- 禁止用湿手操作本产品, 防止水、饮料等液体进入锁体内部。
- 请使用柔软的布清洁锁体, 禁止使用水、茶、酒精擦拭本产品。
- 禁止过度用力或用尖锐的器具按电子锁的按键。
- 产生电池更换报警音后, 请务必在一周之内及时更换新电池。
- 外出时请务必确认门是否完全上锁。

### 使用前须知

因安装的环境不同, 产品零部件会有差异。


**室外侧锁体**

迷你卡 (B2C专用)  
使用说明书, Product Warranty Warranty  
'AA'电池 (LR6)


**室内侧锁体**

应急钥匙 (5EA)  
连接杆扣环, 安装螺丝  
安装菜单 (B2C专用)


### 室外锁体名称

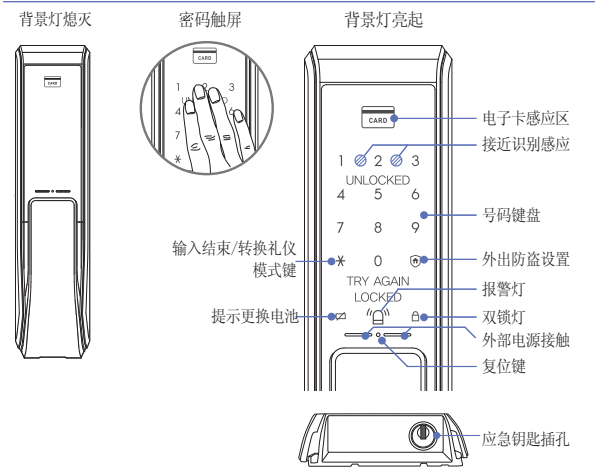

### 室内侧锁体名称

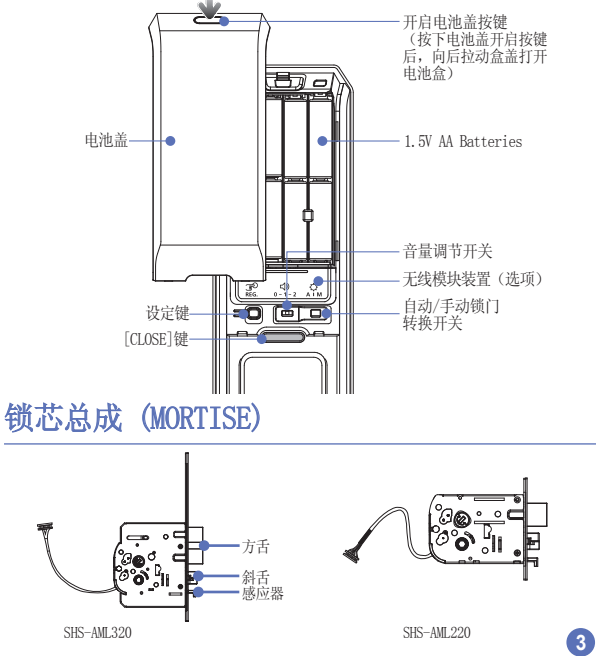

### 锁芯总成 (MORTISE)

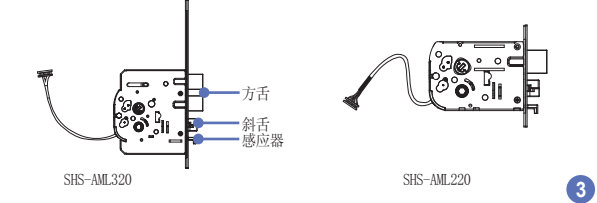

**Warning** 注意管理密码, 别泄漏给他人, 一组密码不宜使用过长时间。

### 注册卡、Key Tag

可注册的密码和卡数量达到30个。

- 按[设定]键 (从室内)
- 输入密码 (从室外)

打开电池盖按一下[设定]键。

[注册卡、Key Tag]

- 接触卡、Key Tag (从室外)
- 接触卡、Key Tag (从室外)

将要注册的卡、Key Tag放到感应区, 随“DING DONG DENG”的声音完成注册。

注册过的卡、Key Tag放在感应区1~5秒内锁体会开启。

**Warning** 想注册多张开门卡时, 注册好第一张卡后在20秒内一次将剩余的卡放到感应区, 如操作过程中间隔20秒以上会自动终止。  
 登入用ID 号码为随机号码

### [通过ID号码进行卡和密码的注册]

- 输入 2位数的ID号码
- 输入新用户密码
- 接触卡、Key Tag (从室外)
- 接触卡、Key Tag (从室外)

输入01~30以内的ID 号码按下[\*] 键。

输入(4~12位数)的密码按下[\*]键。

将要注册的卡、Key Tag放到感应区, 随“DING DONG DENG”的声音完成注册。

注册过的卡、Key Tag放在感应区1~5秒内锁体会开启。

使用者密码是仅针对使用者而设定的密码  
使用者密码不能用于卡注册或者其他类似的功能。

一个 ID 只能标记一个密码或者卡。

### 删除门卡

可以个别删除已经或全部登记门卡。

- 按[设定]键 (从室内)
- 输入密码 (从室外)
- 将要删除的卡进行接触
- 输入需要删除的 ID号码

按[设定]键3秒。

[删除门卡]

需要删除所有卡时, 完成第2阶段操作后按下[88]+[\*]。

按键盘亮灯后输入当前管理密码按下[\*]按键

[删除ID 信息]

输入要删除的卡或者使用密码的2位数ID号码

### 设定双重安全模式

使用密码开门时, 可根据适用性设定认证模式。

短按室内侧锁体的[设定]键。

按下[7]或[9]键后, 按下[\*]键即可设定认证模式。

设定双重认证模式

[7] 键: 双重安全模式  
[9] 键: 普通模式

短按室内侧锁体的[设定]键。


按下[4]或[6]键, 再按下[\*]键, 即可设定解除认证模式。

### 设定双重认证模式

双重认证模式是指开门时, 需同时认证密码和卡的安全强化功能。根据需要使用, 可以设定或解除该模式。

短按室内侧锁体的[设定]键。

按下[4]或[6]键, 再按下[\*]键, 即可设定解除认证模式。

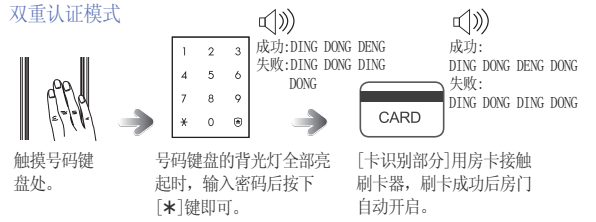

### 设定防盗功能

在用户外出时防止外部入侵的功能, 室内设置后, 意外情况发生时鸣笛报警。

在设置防盗功能的情况下, 如房门从内部被打开, 警报灯将闪烁, 同时持续5分钟鸣笛报警。

设定防盗功能

解除防盗功能

- 若门上锁, 室外侧号码键盘的[ ]键会亮起背光灯。
- 在3 秒以内按下[ ]键, 仅可设定防盗功能。
- 将设定的电子卡、迷你卡置于感应区或者输入密码, 然后按下[\*]键。

### 室内安心模式设定/取消

室内安心模式, 户主在家时防止他人从外部开启房门时使用。

设置室内安心模式

取消室内安心模式

在房门上锁的情况下, 在室内一侧按住[安心]按键持续3秒。

在室内一侧拉动把手打开房门, 安心模式自动解除。

室内安心模式下, 房门无法从室外打开, 请小心使用。应特别注意请勿让儿童在室内设置此模式。

### Menu Table

**初始化**

SS 4560852580

**设定**

密码变更: New Password

卡/门禁卡登入: CARD

使用ID号码标记的卡/密码登入: ID Number, CARD

**删除**

卡/门禁卡: CARD

使用ID号码进行删除: ID Number

删除所有密码: 88

**其他功能**

欢迎模式: 1 ON, 2 No Alarm ON, 3 OFF

双重认证模式: 4 ON, 6 OFF

双重安全模式: 7 ON, 9 OFF

设定自动关门时间: 5 1~9

### 从室外开门(密码)

初始设置为双重安全模式, 如果想设置为一般模式的话, 请参考普通模式设定方法

※ 礼仪模式  
 输入密码前, 先按[\*]键再输入密码, 门锁将不发出“插入钥匙”, “已开门”等提示音。  
 夜间出入静音功能。

触摸号码键盘处, 号码键盘的背光灯亮起时, 按顺序按下亮起背光灯的2 个数字。

号码键盘的背光灯全部亮起时, 输入密码后按下[\*]键即可。

设置“普通模式”时, 只需直接输入密码即可。

**Note**

- 应在号码键盘背光灯亮起时输入密码: 背光灯熄灭时, 请触摸号码键盘处, 背景灯亮起时重新输入。
- 若输入密码错误须取消时, 应按一下[ ]键再重新输入。
- 连续5 次输错密码时, 锁体会发出20 次“Beep”的提示音, 同时电子锁会自动停止工作3分钟。电子锁在停止工作状态下, 每隔10 秒种发出“beep”的声音。3 分钟之后电子锁会发出“哔哔哔哔哔哔”的声音并自动恢复工作。

### 从室外开门(电子卡、迷你卡)

从室外使用电子卡或迷你卡即可开门。请将已设定的电子卡、迷你卡正确地置于电子卡感应区。

接触卡、Key Tag

将电子卡或迷你卡置于电子卡感应区。稍候1 秒钟门即会打开。

### 从室内开门

拉动内侧把手开门

**Warning** 在使用时, 请小心不要夹手。

### 从室内关门

设定自动锁门: 关门1 秒后自动上锁。

设定手动锁门: 按[CLOSE]键进行锁门。

**Note** 如果想在室内检查锁门状态, 轻按放心按钮, 如果门已上锁, 亮红灯提示, 如门未上锁, 亮蓝灯提示。

### 初始化方法 (密码、电子卡、迷你卡)

初始化会删除已设定的所有信息。设定的信息初始化之后, 密码自动设定为“1234”, 电子卡、迷你卡的信息自动删除。

- 按[设定]键(从室内)
- 输入初始号码(从室外)

持续按[设定]键5秒钟。

号码键盘的背光灯亮起后输入“4560852580”, 再按下[\*]键即可。

### 更改密码

密码可注册4~12位的一组, 可注册一个密码, 初始化操作后请重新注册密码。

- 按[设定]键 (从室内)
- 输入密码 (从室外)
- 输入新密码 (从室外)
- 再次输入新密码 (从室外)

短暂的按下设定按钮。

按键盘亮灯后输入密码按下[\*]键。

输新密码 (4~12 位) 后按 [\*] 键。

再次输入新密码按下 [\*] 键密码被保存。

### 设定及解除声音模式

本产品可以设定按号码键盘、开门或关门时的声音。

打开室内侧锁体电池盖。

将[音量调节]开关置于[0]、[2]位置, 盖好电池盖。

[0]: 无声 [1]: 普通 [2]: 大声

### 设置关门时间功能

门敞开会, 设置门栓上锁时间的功能。当门徐徐关上时, 门栓易被卡住, 设置门栓弹出时间将可能改善上述不便现象。自动上锁时间可以调整。

短按按下[设定] 按键。

按[51] ~ [59]键后, 按 [\*]键。

初始值: 1秒  
[51]: 1秒  
[52]: 2秒  
[53]: 3秒  
[54]: 4秒  
[55]: 5秒  
[56]: 6秒  
[57]: 7秒  
[58]: 8秒  
[59]: 9秒

### 迎宾功能设定/解除

迎宾功能指在用户接近门锁时, 即使未接触到密码触屏, 门锁也会自动转入工作认证形态的一种便利功能。

打开电池盒盖后, 轻按[设定] 按键。

功能设定解除/功能说明

- 欢迎模式: 当用户接近锁时, 自动进入认证状态。
- 1分钟报警功能: 感应到有人在电锁前超过1分钟后触发警报。

Code	Welcome	One-minute alarm
[1]-[*]	ON	ON
[2]-[*]	ON	OFF
[3]-[*]	OFF	OFF

**Warning**

- 出厂设置为迎宾模式, 警报功能解除。
- 红外线传感器在阳光紫外线作用下可能导致距离功能发生改变。曝光走廊内部及使用长明灯照明情况容易误导警报发生, 切勿使用。

### 设定自动/手动锁门

本产品可设定关门时自动锁门的功能。

打开室内侧锁体电池盖。

将室内侧锁体的[自动/手动锁门]转换开关推至[手动]置。

- 自动模式: 关门1 秒后自动上锁。但电池没电时不可正常工作。  
 - 手动模式: 关门后不会自动锁门, 需按下室内侧锁体的[CLOSE]键室外侧锁体的[号码输入]键方可锁门。

### 更换电池

更换电池的提示音响起时...  
 使用密码或电子卡(迷你卡)开门响起“致爱丽丝”旋律时, 开门后需更换电池。(若更换电池的提示音响起, 号码键盘右侧的电池交换提示背光灯会亮起。)

更换电池  
 从第一次响起更换电池的提示音后, 一周内必须将旧电池全部更换成新电池。

**Warning**

- 电池因生产厂家、生产日期、使用环境不同, 使用时间存在差异。(AA型号1.5福电池8只, 按每日开关门10次标准计算, 可使用12个月)
- 更换电池的警示音响后, 不更换电池继续使用时, 可能会产生电子锁突然停止工作的情况。
- 电池液体泄漏时会损坏锁体, 请务必定期(约6 个月间隔)进行确认。
- 更换电池的提示音响后, 在更换新电池之前, 无法执行密码/感应钥匙信息的设定、更改、初始化和功能设定等。

### 应急电池的使用方法

到了电池更换日期不更换继续使用时, 电池会没电导致门锁不能正常工作。

使用备用电池开门  
 请到附近的便利店或超市购买应急电池(9V)。  
 - 建议使用比普通电池和充电电池工作寿命长、可长期使用的碱性电池。

● 为提高产品的功能, 生产商可不经用户的同意对使用说明书的内容作出更改。

# Set up Instructions for Alarm and Anti unlock functions


## Alarm function

When this function is activated, an alarm sound and light will turn on for approximately 5 minutes duration.


## Anti-Bypass function

When this function is activated, the internal handle will become tightened to prevent bypass attempts through door edge tools will be minimized.


### Set up the Alarm function

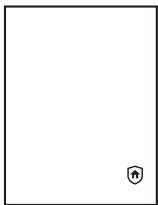

 DING DONG DENG

When the door is closed, user can set up the alarm function by pressing and holding the [] button for 3 seconds until sound confirmation.


### Set up the Anti-Unlock function

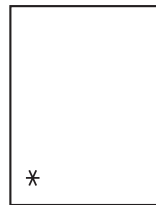


 DING DONG DENG


Press [] and hold.  
After 3 seconds, the alarm will be come active.

### Release the Alarm function

 


OR

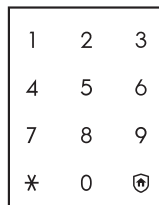

Touch the keypad to turn on.  
Present a registered RF tags/card or password and press [] to release.

### Release the Anti-Bypass function

 

 BEEP BEEP BEEP ~

Press the [**CLOSE**] button to release the internal handle from Anti-Bypass function.

When this function is active, it may be harder to pull the internal handle for elderly or children to open the door from inside.



Warning

- Anti-Bypass function should only be set up when there is no one inside.

# 安防，防止外部强制开门功能 设定/解除

## 安防功能


外出时防止外部入侵的功能，当有人在室内对电锁进行操作时发出报警音。



设置安防功能状态下，若有人在室内开门，室外侧紧急报警灯会闪动同时持续5分钟发出“哔~哔~哔~”的报警音。

## 防止外部强制开门功能



外出时防止他人以非正常手段操作室内门锁把手，通过机械式再次锁定防止外部人员强制开门的功能。
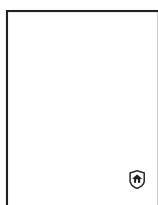
## 安防功能设定




关门后室外侧按键板的[]按键会亮灯，3秒内按下[]按键完成安防功能设定。

## 防止外部强制开门功能设定

 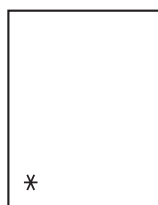


安防功能设定后3秒内按下[\*]按键完成防止外部强制开门功能设定。

## 安防功能，防止强制开门功能，解除报警音

 

或者

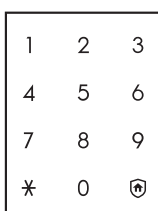

触摸按键板后进行刷卡或者输入密码，随后按下[\*]按键。

## 解除防止室内强制开门功能



若在室内有人的情况下设置了防止外部强制开门功能，老弱者开门会比较吃力可以按下[CLOSE]键解除机械式的锁定状态后轻推把手即可开门，此时会发出“哔~哔~哔~”的报警音。



注意

- 防止外部强制开门功能必须在家里没有人的情况下设定使用。