


AVENTOS HS

Wood/wide aluminum door application

Lift mechanism set

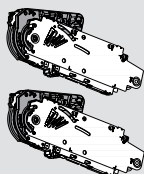

- Lift mechanism (qty 2)
- #7 x 35 mm (1-3/8") wood screw (qty 10)

Part no.

20S2A00.N5

20S2B00.N5

20S2C00.N5

20S2D00.N5

20S2E00.N5


20S2F00.N5

20S2G00.N5

20S2H00.N5

20S2I00.N5

Cover set




- Right and left cover plate
- Non-handed cover caps (qty 2)

Part no.

Cover set

20S8000.NA

Arm assembly set



- Right and left arm assembly
- Stabilizer rod adapter (qty 2)
- Stabilizer rod cover cap (qty 2)

Arm assembly set

20S3500.05

Round stabilizer rod



- Aluminum rod length **1061** (41-3/4"), cut to size
- Length = interior cabinet opening minus **122** (4-13/16")

Part no.

Round stabilizer rod

20Q1061U

NOTE: For cabinets wider than 48" two stabilizer rods and a stabilizer rod connector set required

Wood/wide aluminum door hardware set

- Arm assembly mounting plate (qty 2)

Part no.

Mounting plate set

20S4200

Installation screw for wood

606N or 606P

Installation screw for alum

7072A

Mounting plate with bracket set


- Right and left mounting plates

Part no.

Plate w/ bracket set

20S4F01

Assembly


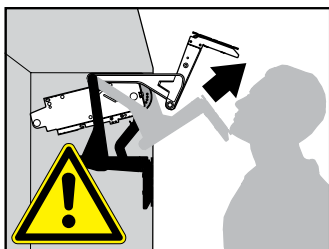


WARNING

Risk of injury from spring-loaded arm

- Do not push arm assembly down or leave in the down position
- Remove arm assembly from mechanism before installing or removing cabinet

1 Locating pin locations and minimum depth

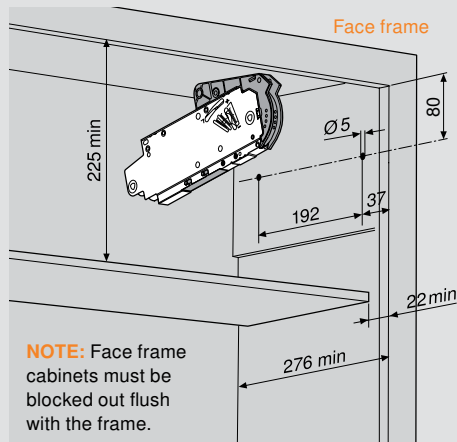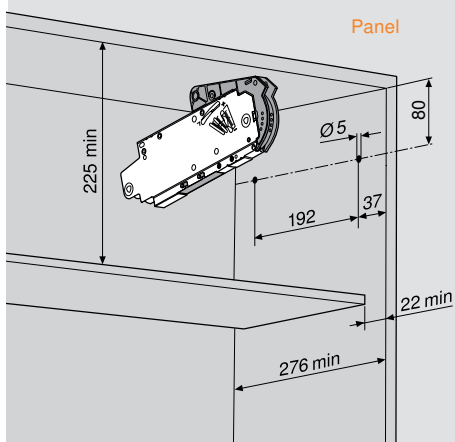


Universal individual template is available for pre-boring 5 mm locating pins

Part no.

65.1051.01




2 Attaching the lift mechanism

- Use the Universal individual template to pre-bore the locating pin holes for the AVENTOS HL lift mechanism
- After aligning the lift mechanism into the cabinet using the locator pins, attach the mechanism with the five mounting screws provided.

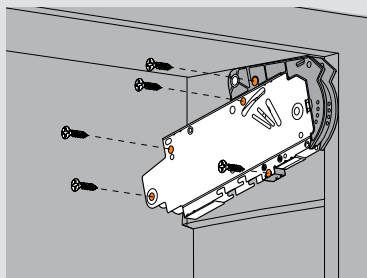

#7 x 35 mm (1-3/8") wood screws (qty 5)

3 Attaching the arm assembly

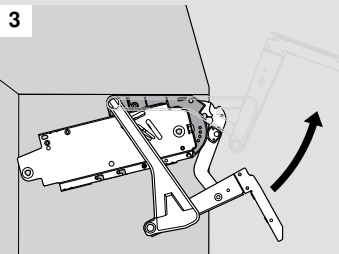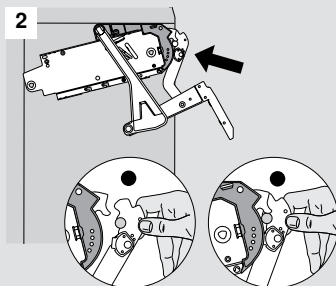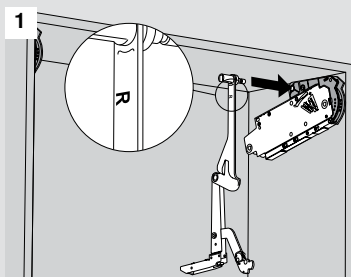

Before starting, see safety note on page 2


1. Find the right and left arm assemblies and match them to the correct side of the cabinet.
2. Attach the arm assembly to the lift mechanism as shown.
3. Lift up on the arm assembly to lock into place.





Risk of injury from spring loaded arm.

4 Attaching the stabilizer rod

After cutting to size, slide the stabilizer arm cover caps onto the rod. Insert the stabilizer rod adapters being careful to line up the tabs (shown with dotted lines). Attach the rod assembly to each arm assembly and tighten the locking screw.

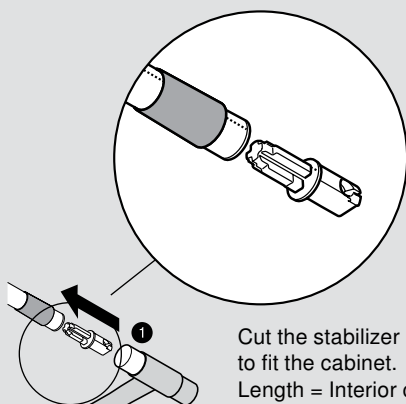


Cut the stabilizer rod to fit the cabinet.
Length = Interior cabinet opening minus 122 mm

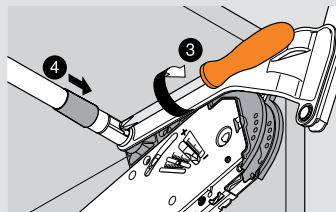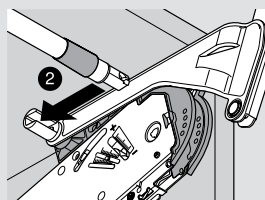

Assembly


5a For Wood/wide aluminum doors

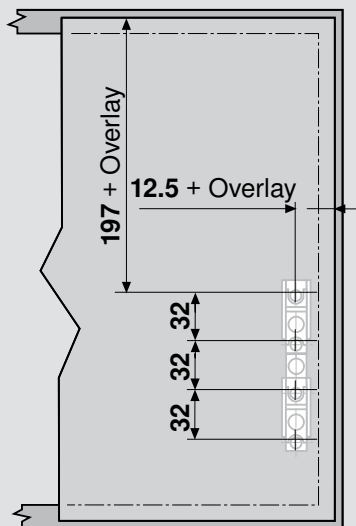


NOTE: Attach with four 606 wood screws

5b For five-panel doors


Standard mounting plate works

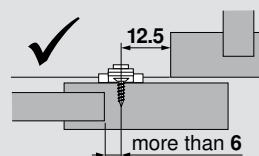

Standard mounting plate does not work


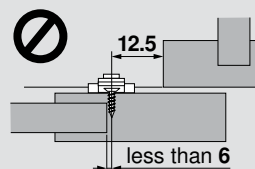


Use mounting plate with bracket when panel is < 6 mm from screw

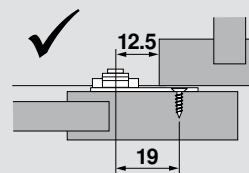


6 Attaching the door

Attach the door using the CLIP mechanism to the arm assembly

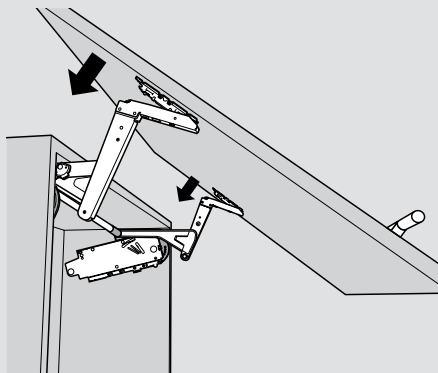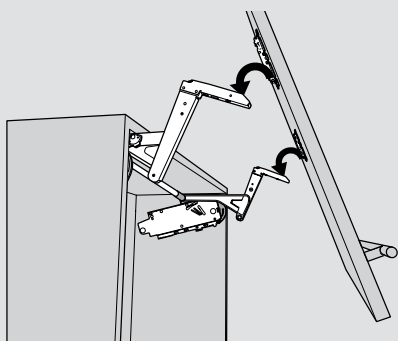


7 Adjusting the lift mechanism tension

Use a screw gun and the supplied #2 x 2 POZI driver bit to adjust the lift mechanism to the desired tension.

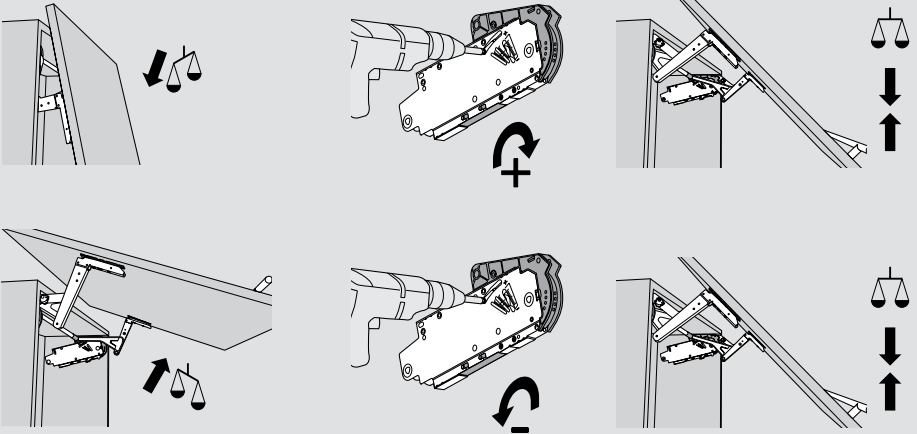


8 Adjusting the door

Use a POZI screwdriver to adjust cam adjustments for each of the three-dimensional adjustments.

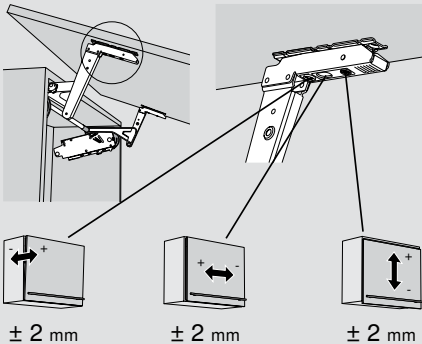


9 Attach covers

Snap the symmetrical cover caps on each cover plate. Place the left and right cover plates over the appropriate lift mechanisms and snap them in place.

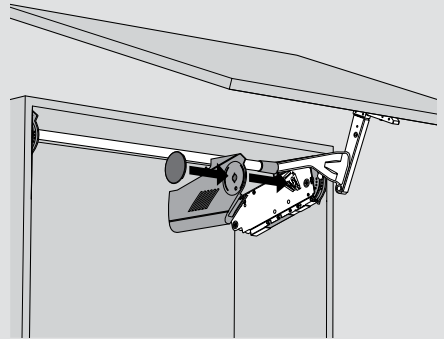

Removal

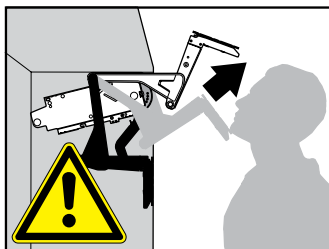



WARNING

Risk of injury from spring-loaded arm

- Do not push arm assembly down or leave in the down position
- Remove arm assembly from mechanism before installing or removing cabinet


1 Removing the door

Open the door. Use a screwdriver to disengage the CLIP mechanism of the arm assembly from the mounting plate.

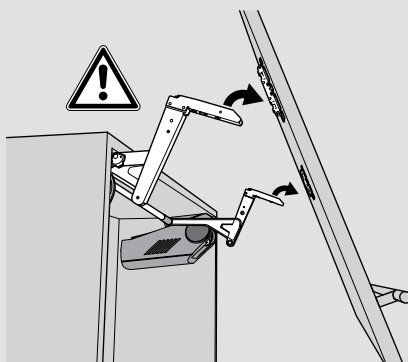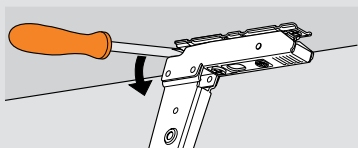



2 Remove the covers

Remove the left and right cover plates.

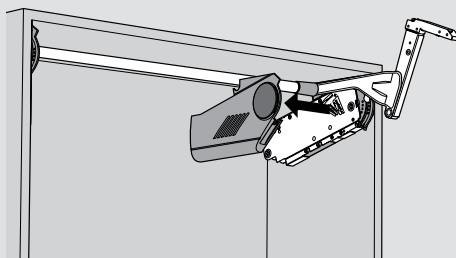



3 Remove the stabilizer rod

Pull back the stabilizer rod cover caps and loosen the locking screw on each end of the stabilizer rod. Remove the Stabilizer rod from the cabinet.

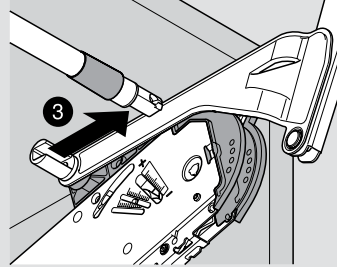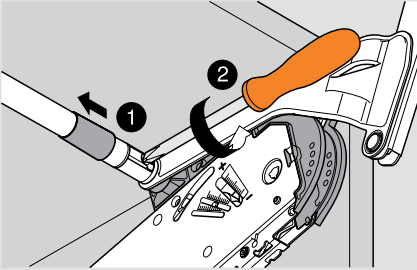


4 Removing the arm assembly

- Use a screwdriver to disengage the arm assembly as shown.
 - Remove arm assembly from mechanism.
- Cabinet is now ready for transport.

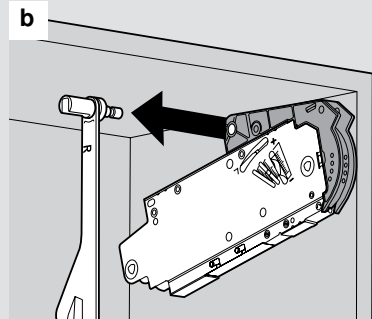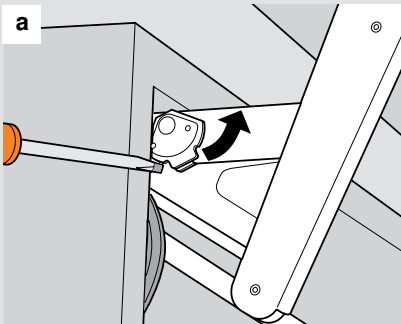


Other information

Panel door protrusion for common cabinet heights

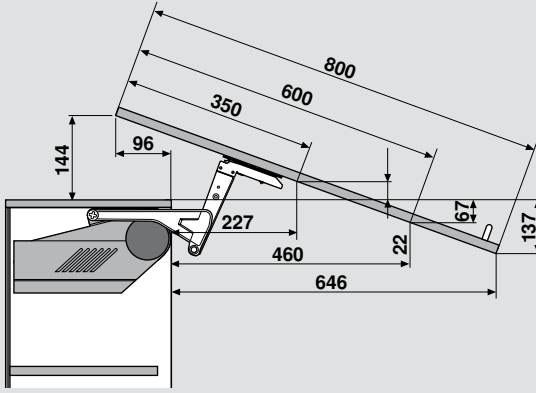

Face frame door protrusion for common cabinet heights

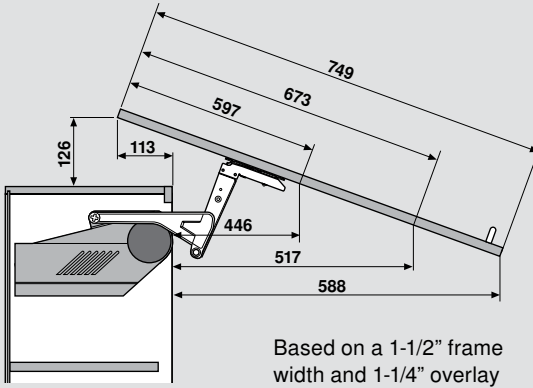

Inch	mm	mm
1/32	.031	1
1/16	.063	1.5
3/32	.094	2
1/8	.125	3
5/32	.156	4
3/16	.188	5
7/32	.219	5.5
1/4	.25	6
9/32	.281	7
5/16	.313	8
11/32	.344	9
3/8	.375	9.5
13/32	.406	10
7/16	.438	11
15/32	.469	12
1/2	.5	13
17/32	.531	13.5
9/16	.563	14
19/32	.594	15
5/8	.625	16
21/32	.656	17
11/16	.688	17.5
23/32	.719	18
3/4	.75	19
25/32	.781	20
13/16	.813	20.5
27/32	.844	21
7/8	.875	22
29/32	.906	23
15/16	.938	24
31/32	.969	24.5
1	1	25.4

Blum, Inc.
 7733 Old Plank Rd.
 Stanley, NC 28164
 800-438-6788
 fax 704-827-0799
 sales.us@blum.com
 www.blum.com

